

Read and Save this Manual.

Keep this manual for the safety warnings and precautions. Refer to this manual for operating, maintenance and inspection procedures. Log the items serial number on the front of this manual. Keep purchase receipt with this manual in a safe dry location for future reference.



X-ROCKET SIDE RAIL - BRONCO.

Model: XR-Side Rail B
2021+ Ford Bronco edition



For help with this product please visit our website at www.xrack.us/help or call 516-338-0884 for assistance. Never overload the rated weight of the vehicle's load capacity which may be lower than the rating of the accessory rack. Some tools are not included for installation to the vehicle.

⚠ WARNING

READ THIS MANUAL BEFORE USING THIS PRODUCT. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY. SAVE THIS MANUAL

⚠ WARNING

Do not operate with unstable loads
Do not load beyond rated capacity
Always strap load securely
Distribute load evenly
Do NOT sit, stand or ride on
Do NOT exceed 65 MPH with Carrier attached
Follow DOT Guidelines for installation and use

⚠ ADVERTENCIA

No opere con cargas inestables
No cargue más allá de la capacidad nominal
Siempre cargue la carga de forma segura
DISTRIBUIR carga uniformemente
No se sienta, se pare o monte
NO exceda 65 MPH con Carrier adjunto
Siga las pautas DOT para instalación y uso

⚠ ADVERTISSEMENT

Ne pas utiliser avec des charges instables
Ne chargez pas au-delà de la capacité nominale
Toujours attacher la charge en toute sécurité
DISTRIBUER charge uniformément
Ne pas s'asseoir, se tenir ou monter sur
Ne dépassez PAS 104 kilomètres à l'heure avec le transporteur attaché
Suivez les directives des autorités pour l'installation et l'utilisation

Installation Instructions

Required tools:



5mm Hex Key
Included




90° Phillips Screw Driver or
Stubby Phillips Screw driver

Not Included

Parts:



Front Roof Bracket
1 - Wide Bracket
2 - Nut Inserts
4 - Socket Screws
4 - Washer
4 - Lock Washer

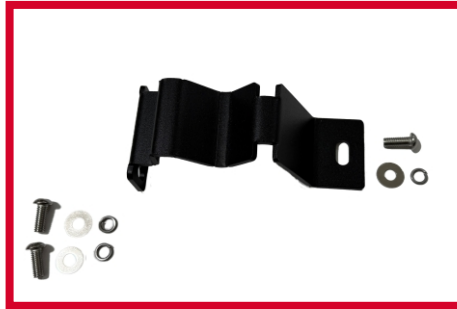

Rear Roof Bracket
1 - Narrow Bracket
3 - Socket Screws
3 - Washer
3 - Lock Washer




Roof Bracket Protector
1 - Narrow bracket protector
1 - Wide bracket protector



Accessory Brackets
2 - 7" Brackets
4 - Slot Nuts
4 - Socket Screws
4 - Washer
4 - Lock Washer




Rail End Caps
2 - End caps
2 - Small Screws

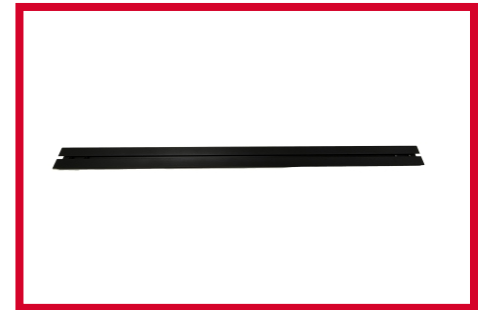

Side Rail
1 - Side Rail

Installation
note:

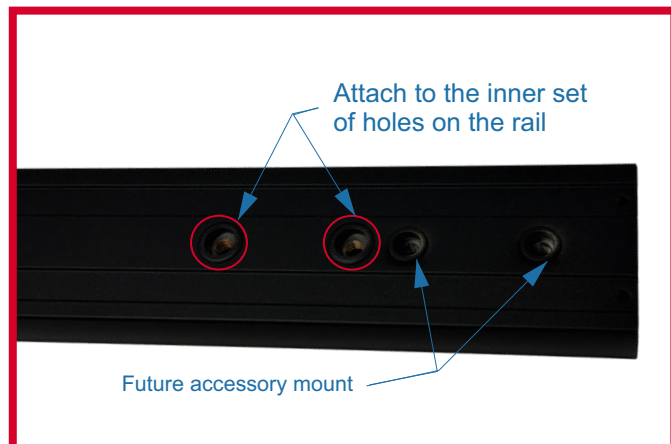

Installation Instructions

Bronco Roof Brackets:

Install protective rubber to the back of the roof brackets. Fig. 1

Remove rear and back side windows and open soft top fully. Install nut inserts into the 2 holes on the roof closest to the windshield. Fig. 2 Bend tab up slightly so once the nut is inserted into the hole the tab will remain on the top to hold the nut in position Fig. 3. Next use 2 Socket Screws, 2 washers and 2 lock washers to secure the Front bracket. Do not Tighten. Fig. 4. Install rear narrow bracket using 1 socket screw, washer and lock washer to the existing threaded nut. Do not Tighten. Fig. 5.

Side Rail:

Install side rail to front and rear bracket using socket screws (Use inner set of holes on each side of rail), washer and lock washers. Do not tighten. Fig.6.

Once all parts are assembled, then you can tighten all socket screws with 5mm hex key (included).

Accessory Brackets:

Insert socket screw, washer, and lock washer to the 2 bottom holes of your accessory bracket. . Fig.7 Install slot nut but do not pass the screw past the back of the nut. Fig 7 With at least one end cap off side the slot nuts into the track with the bracket. Repeat for any other brackets. Adjust position before tightening. Bend in bracket should be facing towards the center of the roof. Fig.8

End Caps:

Insert end caps into right and left side of rail with screw holes facing the back using 90° Phillips Screw driver or stubby philips screw driver (not included). Install small phillips screws to secure Fig. 9

Fig.1



Fig.2

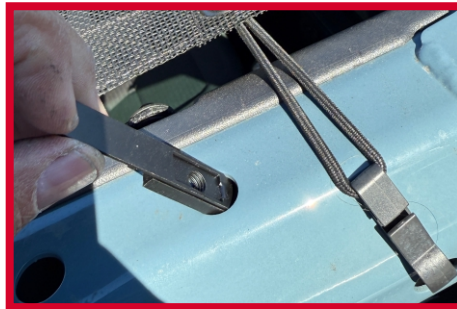


Fig.3



Fig.4

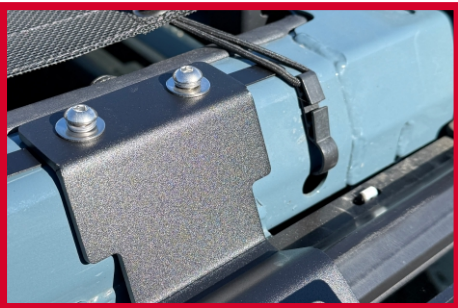


Fig.5



Fig.6



Fig.7



Fig.8



Fig.9



Safety Information

1. Read all instructions before using this product
2. Check for missing or damaged parts
3. Do not exceed the vehicle maximum load capacity.
4. Always distribute load evenly. Heavier poles should be on the inner rod holder when set up for dual rods.
5. Always secure load with proper straps.
6. DO NOT exceed 65MPH with equipment mounted, not for extreme off road conditions
7. Follow D.O.T. Guidelines for installation and use.
8. Do not use if you feel your vision is obstructed. Follow all local and federal laws.
9. Be aware of road conditions! Sudden bumps and pot holes can cause an instant dynamic load on the cargo accessories which may result in damage to the equipment. Driving over a bump can create a brief excess load on your rack. Always check your load and hitch connections after going over any large bumps or dips in the road.
10. Check tension on bolts periodically.
11. Know clearance height when rods are installed, Low clearance bridges, garages and trees can cause damage to rods.

Weight Rating:

Single Rail Holder has 30lb recommended limit including Brackets and Accessories.



Failure to comply with these instructions and safety precautions can result in serious injury or damage to equipment or vehicle



Maintenance and Service

Always inspect rack before use.

Check for:

- Loose or missing hardware
- Cracked or broken parts
- Any bent parts

DO NOT use rack or accessories if there is damage or missing parts.

Cleaning/Care:

Clean with a mild soap and sponge or rag.
Keep inside of receiver tube clean from debris
Always thoroughly dry before storage.

LIMITED WARRANTY

B&R Innovations, LLC (B&R) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from B&R or from an authorized distributor AND B&R has been fully paid.

What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

What is a "proper request"?

A request for warranty service is proper if B&R receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail, Fax or Email

X-Rack c/o B&R Innovations, LLC

Info@BandRinnovations.com

Fax: 917-677-8449

999 S. Oyster Bay Rd, Ste. 402

Bethpage, NY 11714

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After B&R receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, B&R may require you to send the entire product, or just the defective part or parts, to its facility in Bethpage, NY. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions ("wearing parts"), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for X-Rack Frame and Receiver tube is 1 year. The warranty period begins on the date when B&R ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. B&R may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

If a defective part is covered by the warranty, what will B&R do to correct the problem?

B&R will provide an appropriate replacement for any covered part. An authorized representative of B&R will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive conditions;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Accidents involving the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from B&R. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.
4. Hardware
5. Non X-Rack accessories
6. Powder coating chips and scratches, and is very difficult to fix or repair. Chips and scratches are a direct result from day to day use and are not covered under warranty.

Do any other warranties apply to the product?

B&R makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.